
Key operations (outside of the menus)

Active in BANKS mode, handling of data memory banks while measuring. Changing of the calibration table is locked.

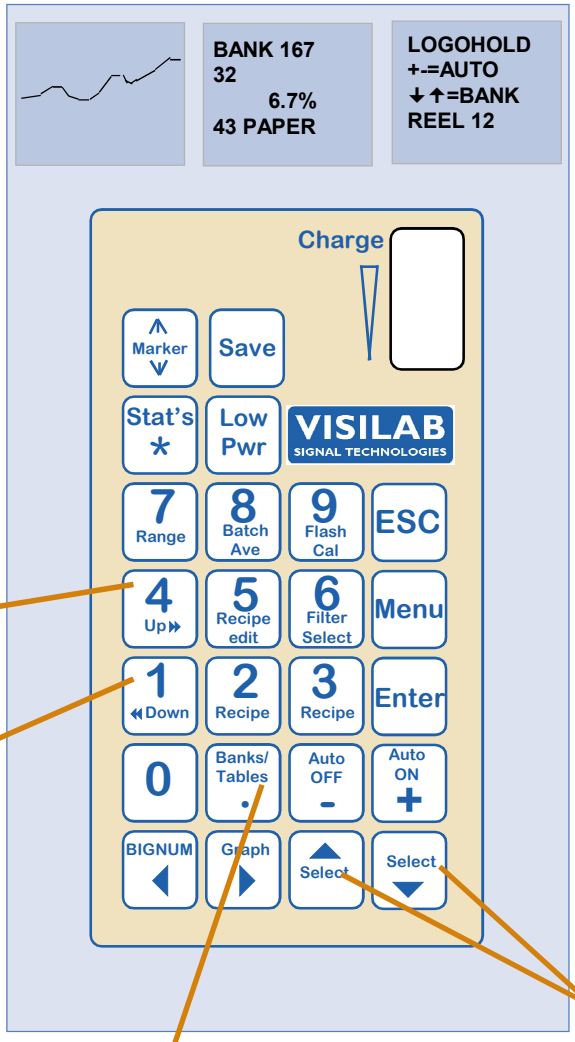

BANKS

Key 4 for browsing up fast in banks

Key 1 for browsing down fast in banks

Up/Down for retrieving a memory bank (from 0 to 819 if available)

Switch between BANKS and TABLES modes. Text in blue indicates differences between the modes

Visilab Signal Technologies Oy
Address:
Sepäntie 4
FI-07230 Monninkylä
FINLAND

Tel.:
+ 358-45-635 4885

VAT FI 06312080

www.visilab.fi
Y 0631208-0 ALV Rek.
Mäntsälä Reg. 365.258